
# kanto ڬ

#### User Manual SM1 TV Stand Mount

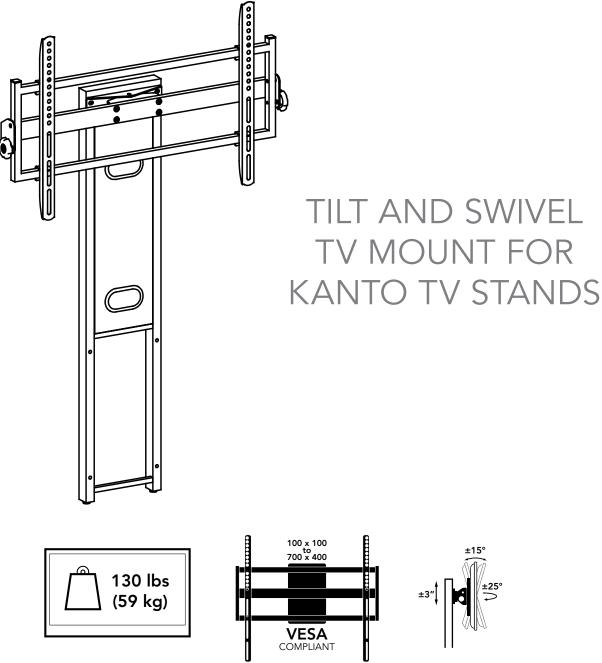


#### 

The maximum loading weight is 130 lbs (59 kg). This TV stand mount is intended for use only up to the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in instability causing possible injury.

#### Introduction

Thank you for choosing the Kanto Living SM1 Stand Mount, designed to attach to the rear of a compatible Kanto TV Stand. The SM1 will mount flat panel televisions weighing up to 130 lbs (59 kg), swivel ±25° and tilt ±15°.

Read these instructions fully before assembly and installation of this stand. If you do not understand these directions, or have any doubts about the safety of the installation, please consult a qualified installation contractor. Make sure there are no defective or missing parts. Do not use defective parts. If there is hardware missing, or if you are uncertain whether the part is defective call Kanto directly at 1-888-848-2643 or email <u>support@kantoliving.com</u>. Kanto cannot be liable for property damage or injury caused by incorrect mounting, incorrect assembly, lifting or incorrect use of this product.

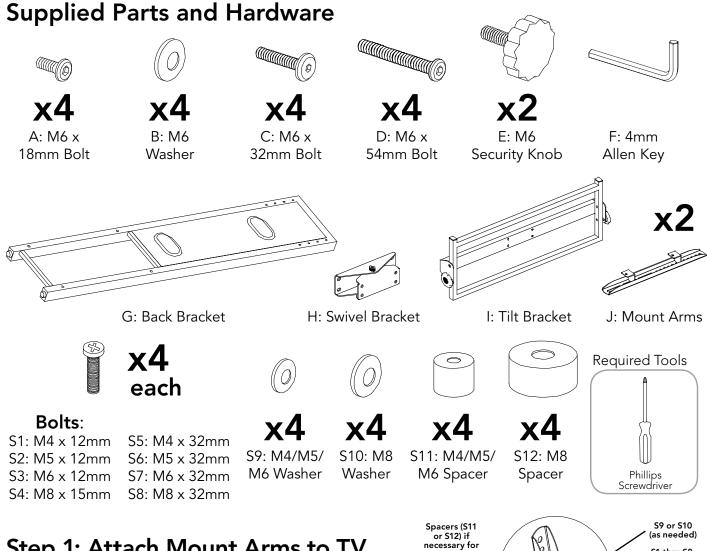

Step 1: Attach Mount Arms to TV


**Step 1.1** Select the correct size of bolt.

Kanto provides 4 bolt diameters (Metric sizes M4, M5, M6, and M8) in two lengths (**S1** thru **S8**).

Select the correct diameter screw and hand screw into the back of the TV to determine the correct length. Use the longest available bolt without reaching the bottom of the TV threads, using spacers (**S11** and **S12**) if needed. Be careful not to overtighten the bolts, as damage to your TV may occur.

Step 1.2 Attach TV mount arms to the back of the TV, as shown in Diagram A.

Use washers (**S9** and **S10**) as needed for smaller bolt sizes, and spacers (**S11** and **S12**) if necessary for TVs with curved backs.

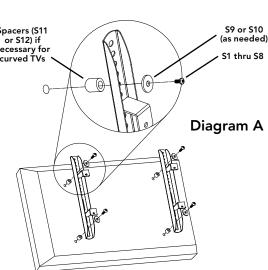

## kanto ڬ

#### Step 2: Attach Swivel Bracket

You can mount the swivel bracket at one of three heights - each 1.5" (3.8cm) apart. Select your desired height, and attach the Swivel Bracket (**H**) to the Back Bracket (**G**) using four M6 x 18mm bolts (**A**) and M6 washers (**B**), as shown in Diagram B.

Tighten using the Allen Key (**F**).

G

### Step 3: Attach Tilt Bracket

Attach the Tilt Bracket (I) to the Swivel Bracket (H) using four M6 x 32mm bolts (C), as shown in Diagram C.

Tighten using the Allen Key (**F**).

**Diagram** C

### Step 4: Attach Mount to Stand

Attach the complete mount assembly to the four captive nuts on the rear frame of your TV stand using four M6 x 54mm bolts (**D**), as shown in Diagram D.


Tighten using the Allen Key (F).

### Step 5: Place TV on Mount and Tighten Security Knobs

**Diagram B** 

Position your completed TV stand and mount where desired. Use two people to lift the TV and position the mount arms over the horizontal rails of the Tilt Bracket (I), as shown in Diagram E.

To secure the TV in place, screw the Security Knobs (**E**) in to the threaded holes on top of each mount arm (**J**), as shown in Diagram F. Adjust position, tilt and swivel as desired. Diagram D

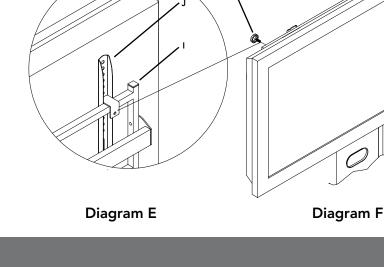

# kanto ڬ

#### Kanto Speakers

- Check out our full line of bookshelf and deaktop speaker systems
- Available in a stunning error of colors
- Visit kantospeakers.com for more!



To learn more about all our products, visit www.kantoliving.com

🖡 Kanto Living 👘 🔽 🛭 Kantoliving

Warranty

Limited Warranty to Original Purchaser

Kanto Distribution Inc. (Kanto) warrants the equipment it manufactures to be free from defects in material and workmanship for the following limited warranty period of: 24 months parts and labour

If equipment fails because of such defects and Kanto or an authorized dealer is notified within 24 months from the date of shipment with proof of original invoice, Kanto will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the repair. Such repairs are warranted for 90 days from the day of reshipment to the original purchaser. This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

Customers will be responsible for obtaining a Return Authorization as well as shipping costs to return product to a Kanto location or authorized depot listed on the website. If the equipment is covered under the warranty provisions above, Kanto will repair or replace, and be responsible for return shipping to the customer. Please keep the original packaging so products will not be damaged during shipping, and we recommend you insure your shipment. If equipment fails outside the warranty provisions, customers will be quoted repair and return shipping costs prior to work being performed.

The information in the owner's manual has been carefully checked and is believed to be accurate. However, Kanto assumes no responsibility for any inaccuracies that may be contained in the manual. In no event will Kanto, be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages.

14-10



www.kantoliving.com support@kantoliving.com Tel 888.848.2643

kantoliving

Э